



PROGRAMMING MICRA-2G AND PLUNGER-G INTO 2GIG GO! CONTROL

1. Press **[SECURITY]**
2. Press **[MENU]**
3. Press **[TOOLBOX]**
4. Enter **Installer Code** (default 1561)
5. Press [←] (left arrow)
6. Press **[INSTALLER TOOL BOX]**
7. Enter **Installer Code** (default 1561)
8. Press **[SYSTEM CONFIGURATION]** *“Q1 Select RF Sensor # (01-48)”*
9. Enter Sensor # (i.e 02)
10. Press **[Down Arrow]** *“Q1 Select RF Sensor 2 type”*
11. Press [←] [→] to select zone type
12. Press **[Down Arrow]** *“Q1 select RF sensor 2 equipment code”*
13. Enter **0637** *[0637] HW D/W“5816”*
14. Press **[Down Arrow]** *“Enter RF sensor 2 serial number (seven digits)”*
15. Program Sensor
 - a. Manually – Enter 7-digit serial number
 - b. Learn mode –
 1. Press **[SHIFT]**
 2. Press **[LEARN]**
 3. Trip RF Sensor *(screen will acknowledge sensor)*
 4. Press **[OK]**
16. Press **[Down Arrow]** *“select RF sensor 2 equipment age”*
17. Press **[Down Arrow]** *“select RF sensor 2 loop number”*

(For Micra-2G or Plunger-2G loop 2 for Honeywell 5800Micra or 5800RPS loop 1)

18. Press **[Down Arrow]** *“select RF sensor 2 dialer delay”*
19. Press **[Down Arrow]** *“select RF sensor 2 voice descriptor”*
20. Press **[Down Arrow]** *“select RF sensor 2 reports”*
21. Press **[Down Arrow]** *“select RF sensor 2 supervised”*
22. Enter **1**
23. Press **[Down Arrow]** *“select RF sensor 2 chime”*
24. Press **[Down Arrow]** *“summary of sensor 2”*
25. To exit programming - Press **[SKIP]** Press **[END]** Press **[EXIT]**
26. To program additional transmitters – Press **[SKIP]** Press **[GOTO]**
Enter new sensor #. Goto Step #10